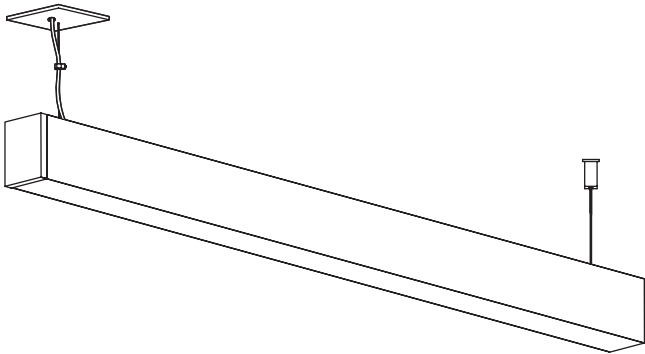 


B-LINE pendant

MOUNTING INSTRUCTIONS

DO NOT DISCARD!



SIGN LEGEND

 power OFF

 power ON

 attention

 don't touch the LED

 use ESD gloves

TOOLS REQUIRED (not included)

 pencil

 screws

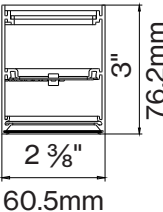 
 drill

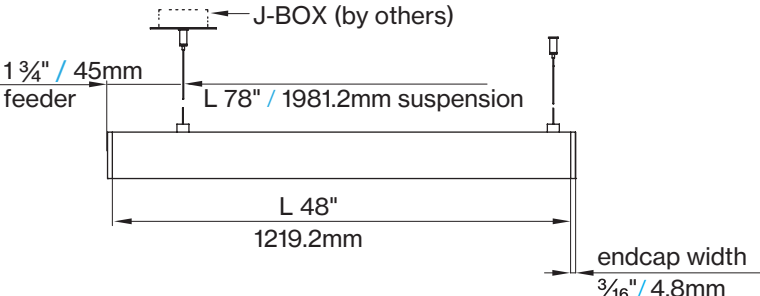 
 screwdriver

 anchors (appropriate for your application)

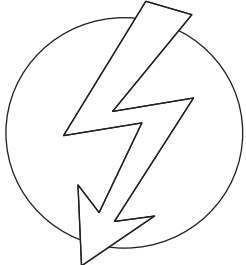 
DIMENSIONS

B-LINE 2.5 direct

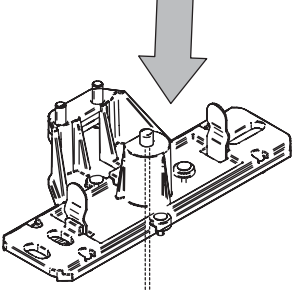 




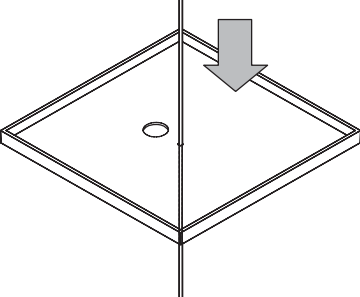 
TURN OFF POWER SOURCE BEFORE INSTALLATION

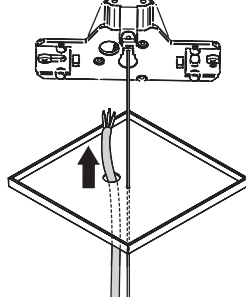 
1. Thread **aircraft cable** through bracket



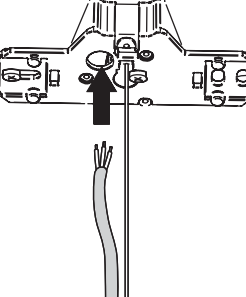 
2. Thread aircraft cable through cover



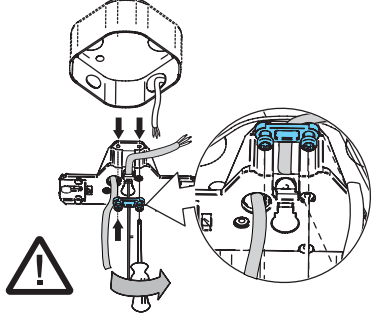 
3. Thread **power feed** through cover plate



4. Thread **power feed** through bracket



5. Use screws to secure strain relief



BASO Inc. 150 Hawley Rd. Oxford, CT 06478 T: +1 203.262.9990 www.basolighting.com

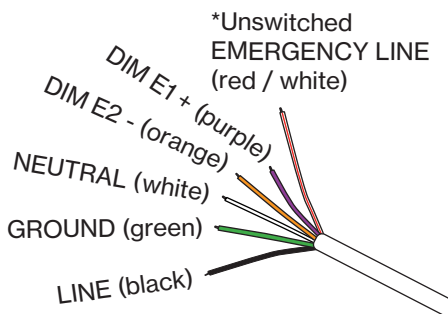 
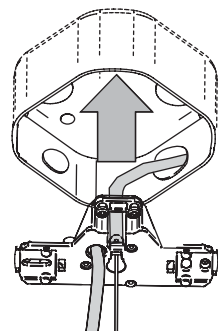 
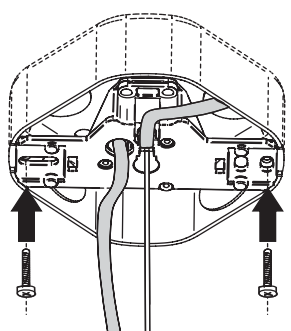 
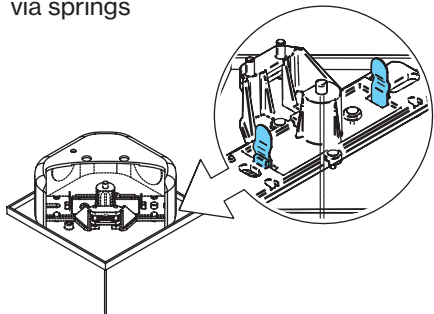 
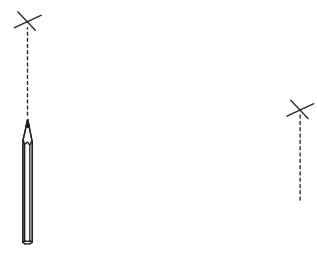 
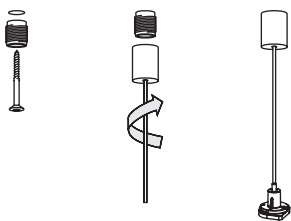 
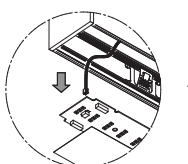 
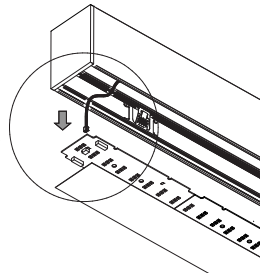 
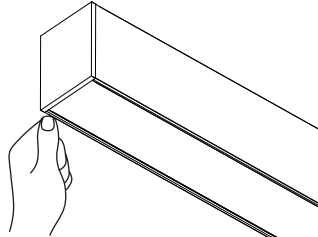 
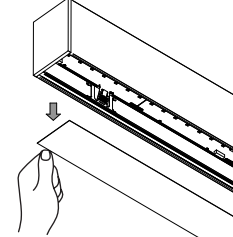 
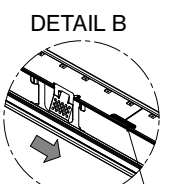 
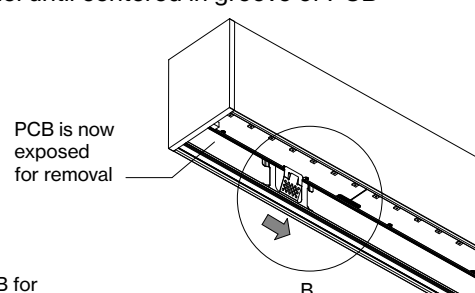 
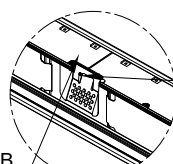 
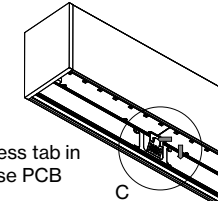 
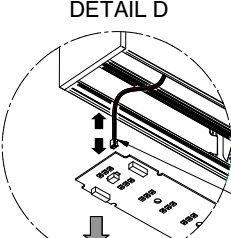 
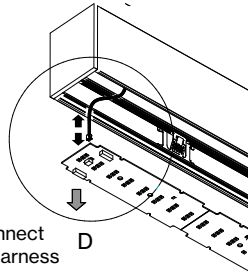 
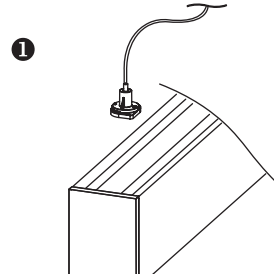 
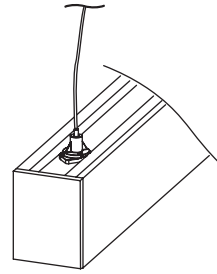 
MI-V03

12/2/25

1 / 4

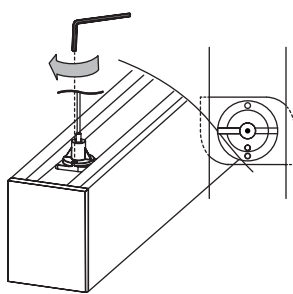 
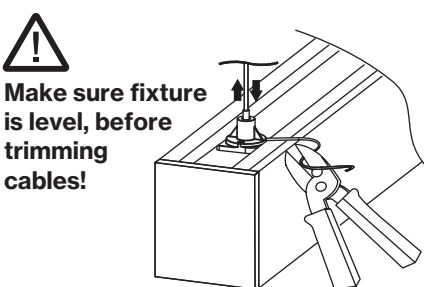 
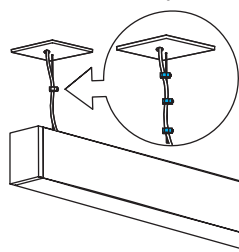 
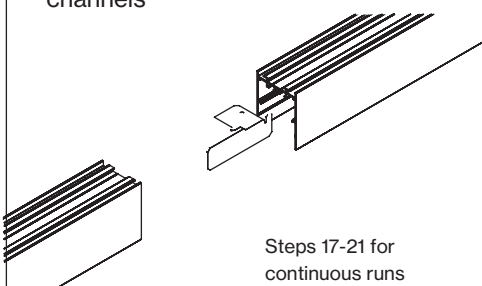 
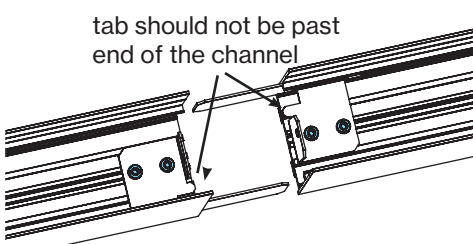 
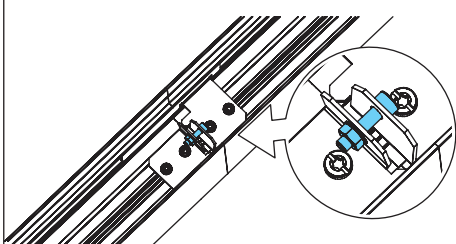 
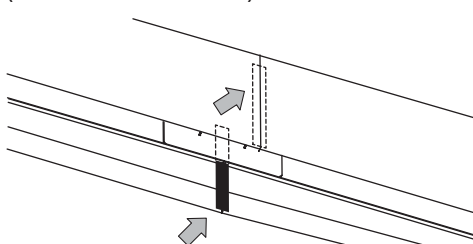 
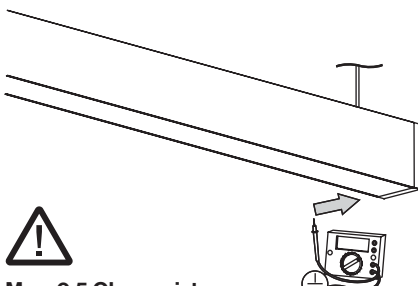 
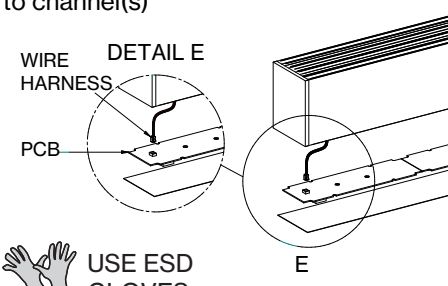 
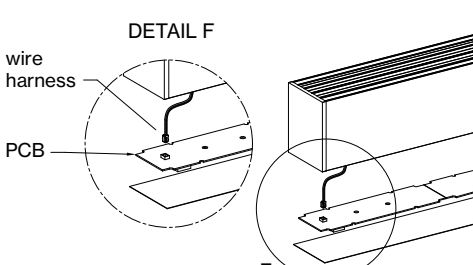 
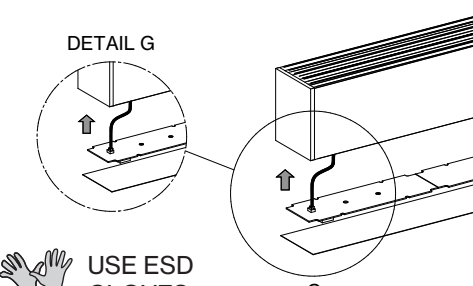 
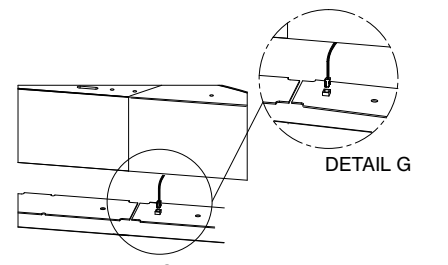 
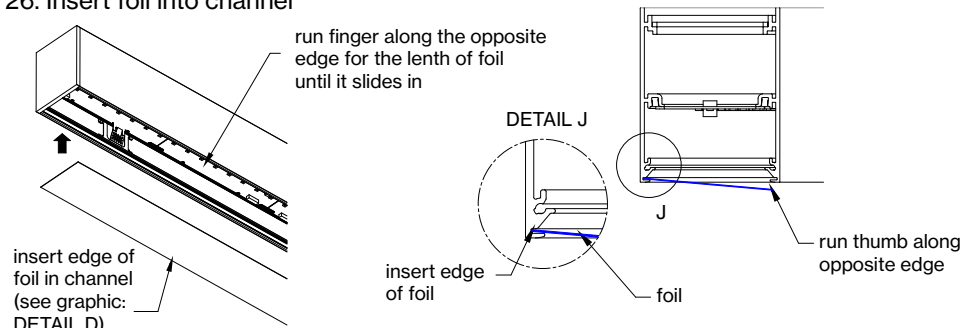 
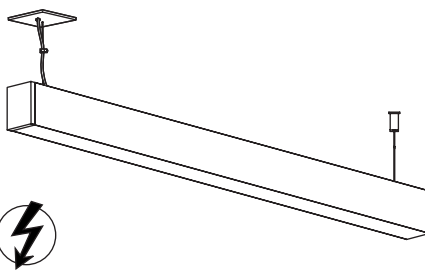 
B-LINE pendant

MOUNTING INSTRUCTIONS

6. Connect wiring to power source *Unswitched EMERGENCY LINE (red / white) DIM E1+ (purple) DIM E2- (orange) NEUTRAL (white) GROUND (green) LINE (black) 	7. Place bracket into junction box 	8. Screw bracket into junction box 
9. Click cover plate onto bracket via springs 	10. Mark mounting positions for suspension 	11. Assemble barrel mount and rope fixation. Use anchors that are appropriate for your ceiling type 
12. Remove foil / PCB from channel DETAIL A  A  USE ESD GLOVES	12a. To remove foil, see steps 12.1 to 12.5 12.1 Run fingers on side edge to loose the foil 	12.2 Grasp the depressed side of foil and pull out from profile 
12.3 Slide clips along channel until centered in groove of PCB DETAIL B  Groove in PCB for mounting clips PCB is now exposed for removal B 	12.4 Press tab in to release PCB Pull on PCB to release from channel DETAIL C  1.4a: Press tab in to release PCB C  1.4b: Pull on PCB to release from channel	
12.5 Disconnect wire harness and set PCB aside DETAIL D  disconnect wire harness D 	13. Insert rope fixation into TOP of channel and turn clockwise to secure  1  2 	

B-LINE pendant

MOUNTING INSTRUCTIONS

14. Use HEX KEY to tighten set screw 	15. Adjust cables; once they are level, trim them Make sure fixture is level, before trimming cables! 	16. Secure power feed cable to suspension, cable every 3 inches using cable ties (cable ties provided by others) 
17. SYSTEMS: Slide connectors into channels  Steps 17-21 for continuous runs	18. SYSTEMS: Use screws to secure connectors to channels tab should not be past end of the channel 	19. SYSTEMS: Slide channels together. Secure connector with screw and nuts 
20. SYSTEMS: Apply black electrical tape to the interior of the channels (where channels meet) 	21. Test the channel grounding  Max. 0.5 Ohm resistance	22. Connect PCB wire harness and foil to channel(s) WIRE HARNESS PCB DETAIL E E USE ESD GLOVES 
23. Connect pcb and wire harness to channel(s) DETAIL F wire harness PCB F 	24. Insert foil and PCB into channel(s) DETAIL G USE ESD GLOVES G 	25. SYSTEMS: Make connection between segments DETAIL G G 
26. Insert foil into channel run finger along the opposite edge for the length of foil until it slides in insert edge of foil in channel (see graphic: DETAIL D) DETAIL J J insert edge of foil foil run thumb along opposite edge 		27. Installation complete  

Technical Support Hotline

Call the Technical Support Hotline from
Monday to Friday, 8 AM - 6 PM (EST)

Hotline:

+1 203 262 9990

Or 24/7 via email:

support@basolighting.com

EN Installation, commissioning and maintenance may only be performed by authorized and qualified personnel, taking into consideration these installation instructions and any standards and regulations applicable to the respective area of application. The electrical, mechanical and thermal suitability of the luminaire for the intended area of application must be ensured and the secure fastening of the luminaire after its installation must be controlled. Turn off supply voltage before replacing any lamps (if applicable) as well as before performing any other works on the luminaire (e.g. cleaning) and wait until luminaire and lamp have completely cooled off. Please refer to the installation notes of the lamp manufacturer when inserting, replacing and operating conventional lamps. Use a soft, damp cloth to clean the luminaire. To clean plastic components and reflectors, a standard pH neutral, alcohol-free, non-abrasive cleaning agent may also be used.

Keep these installation instructions in a safe place as reference for any future maintenance works.

 
1. The lamp is not suitable for outdoor use.
2. The lamp may only be used with a safety guard.
3. Damaged protection glasses and covers have to be replaced immediately.
4. Corrosive chemical products must not be used as this may have a detrimental effect on the luminaire.
5. No liability is accepted for any subsequent change of the luminaire.
6. LEDs are high-quality electronic components! Please avoid touching by hand the LED light emitting surface while assembling or replacing parts and during maintenance work.
7. To avoid damage of the profile, unevenness on the wall or ceiling must be leveled out before assembling the profiles. While assembling the profiles, make sure they do not deform in order to guarantee their proper function.
8. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
9. The LED circuit must always be closed, before the converter is connected to the main power. BASO does not assume any liability for damages resulting from nonobservance of this rule.
10. Luminous flux and connected electrical load are subject to an initial tolerance of up to +/-10%. Color temperature is subject to a tolerance of up to +/- 150 Kelvin from the nominal value.

FR Le montage et la maintenance peut être effectué par spécialistes respectant les normes y régles valides. Assurer l'aptitude thermique, mécanique et électrique pour l'emploi prévue et assurer la fixation de la luminaire. Éteindre la tension avant de changer les lampes (si applicable) ou avant de réaliser travaux (p.ex nettoyage) a la luminaire. Attendre jusqu'à ce que la luminaire et les lampes ont fraichit complètement. Merci de bien vouloir vous référer aux notes d'installation du fabricant de la lampe lors de l'insertion, le remplacement et la mise en route, avec des lampes conventionnelles. Pour nettoyer la luminaire utiliser un drap humide et doux. Pour nettoyer les parties du plastique ou les réflecteurs on peut utiliser encore un produit de nettoyage sans alcool qui ne fraye pas le material. Garder cette notice de montage pour possibles travaux de maintenance.

1. La luminaire n' est pas apte pour l'utilizage exterieur.
2. Utilizer la luminaire seulement avec un dispositif de sécurité
3. Changer immédiatement des verres de sécurité defectes ou bien des écrans de protection.
4. Evitez tout contact de la lampe avec de produits chimiques corrosifs.
5. Nous déclinons toute responsabilité en cas de modifications ultérieures.
6. Des LEDs sont des composants électroniques de haute qualité! Eviter tout contact direct de la surface de sorti de lumière de la LED avec les mains lors du montage ou des travaux de maintenance de la lampe.
7. Pour éviter l'endommagement du profil, il est nécessaire de compenser les irrégularités du mur ou du plafond avant le montage des profils. Pour garantir un fonctionnement irréprochable des profils, il ne faut pas déformer les profils lors du montage.
8. La source du luminaire peut être remplace uniquement par le fabricant ou un tiers habilité.
9. Il faut que le circuit de LED soit fermé avant de connecter le convertisseur. BASO ne assume pas la garantie si cette norme ne se respecte pas.
10. La puissance et le flux lumineux affichent d'origine une tolérance de +/-10 %. Tolérance de la couleur de température : +/- 150 Kelvin.

ES La instalación, la puesta en marcha y el mantenimiento sólo deben realizarse por personal especializado considerando esta guía de instalación y todas las normas y reglamentaciones vigentes. Asegurarse de la aptitud eléctrica, mecánica y térmica de la luminaria para la aplicación prevista y comprobar la fijación segura de la luminaria después de su instalación. Apagar siempre la corriente antes de cambiar la lámpara (en caso justificado) o de realizar algún otro trabajo en esta (p.ej. Limpieza). Esperar hasta que se enfrien la luminaria y la lámpara completamente. Tener en cuenta las instrucciones de montaje del fabricante al colocar, cambiar y utilizar lámparas convencionales. Para la limpieza de la luminaria utilizar un paño suave y húmedo. Para limpiar componentes de plástico y reflectores puede usar también un limpiador pH neutral y sin alcohol que no roce el material. Guardar esta guía de instalación para trabajos de mantenimiento.

1. La luminaria no es apta para utilizarla en el exterior.
2. La luminaria solo debe accionar con un dispositivo de seguridad.
3. Cambie de inmediato los vidrios y las tapas de protección dañados.
4. Químicos que tienen efectos corrosivos no deben influir en la luminaria.
5. Para modificaciones futuras en la luminaria no se asume ninguna responsabilidad.
6. Los LED son componentes electrónicos de alta calidad! Por favor durante el montaje o el mantenimiento evite el contacto directo con la superficie de emisión.
7. Para evitar daños en el perfil, los desniveles de las paredes y techos deben ser enrasados antes del montaje de los perfiles. Para garantizar su buen funcionamiento, los perfiles no deben sufrir deformaciones durante el montaje.
8. La fuente luminosa contenida en esta luminaria debe ser reemplazada únicamente por el fabricante o su agente de servicio o similar persona cualificada.
9. El circuito LED debe ser cerrado antes de conectar el convertidor. BASO no asume garantía si esta norma no se respeta.
10. La potencia original y el flujo luminoso presentan una tolerancia de +/-10%. Tolerancia de temperatura de color: +/- 150 Kelvin.

 


The lamp may only be operated with its full protective cover!

L'apparechio necessita del relativo vetro di protezione!



Sólo usar la luminaria con su cobertura de seguridad completa!



Recommended room temperature: 77 °F.

Temperatura ambiente recomendada: 77 °F.

Température ambiante recommandée: 77 °F.



Don't touch the LED



Use gloves.

Use guantes.

Utiliser des gants.