DOT-SQ recessed

MOUNTING INSTRUCTIONS

DO NOT DISCARD!

LEGEND OF THE SIGNS

- POWER OFF
- POWER ON
- DO NOT TOUCH THE LED
- ATTENTION
- USE ESD GLOVES

TOOLS REQUIRED (not included)

- pencil
- screwdriver
- drill
- screws
- spackle knife
- drywall saw

DOT-SQ

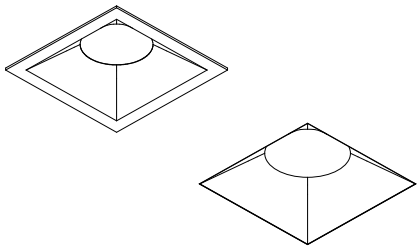

DIMENSIONS (DOWNLIGHT)

DOT-SQ 1.5

ADJUSTABLE

RECESSED TRIM

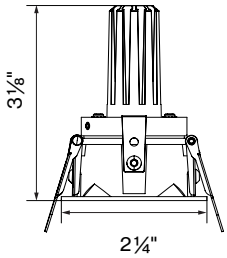

RECESSED TRIMLESS (mud-in)

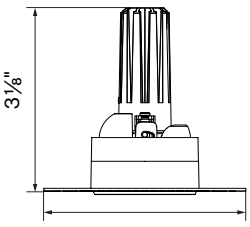

FIXED

RECESSED TRIM

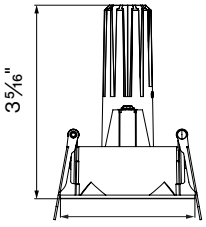

RECESSED TRIMLESS (mud-in)

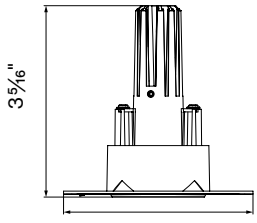

DOT-SQ 2.5

ADJUSTABLE

RECESSED TRIM

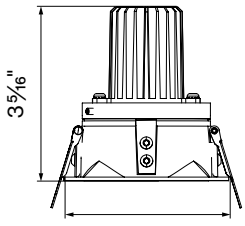

RECESSED TRIMLESS (mud-in)

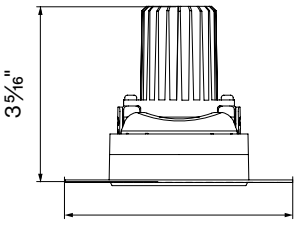

FIXED

RECESSED TRIM

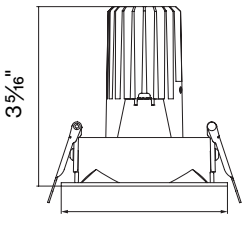

RECESSED TRIMLESS (mud-in)

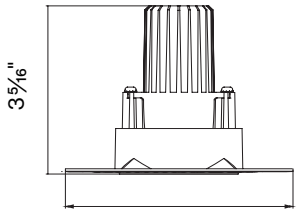

DOT-SQ 4.0

ADJUSTABLE

RECESSED TRIM

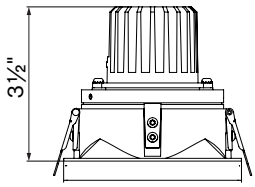

RECESSED TRIMLESS (mud-in)

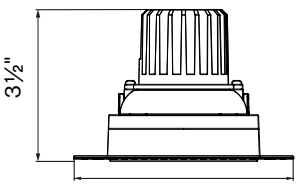

FIXED

RECESSED TRIM

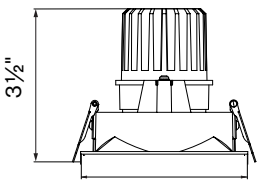

RECESSED TRIMLESS (mud-in)

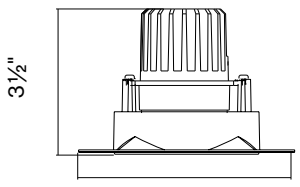

DIMENSIONS (HOUSING)

NON-IC RATED

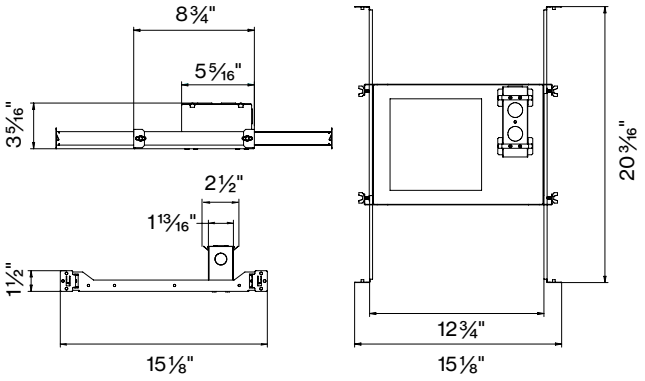

IC RATED

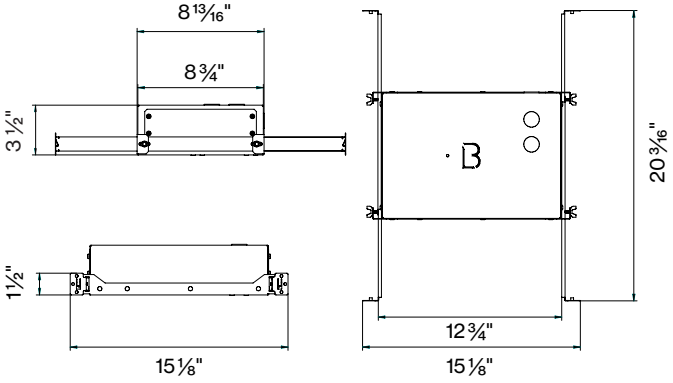

REMOTE HOUSING

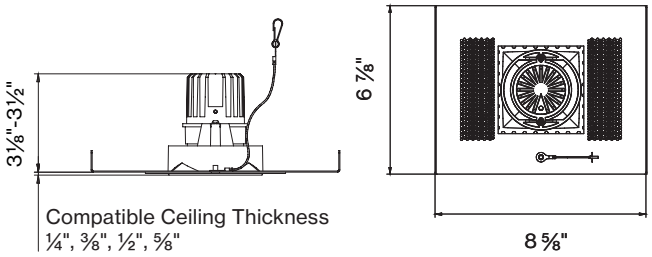

POWER SUPPLY

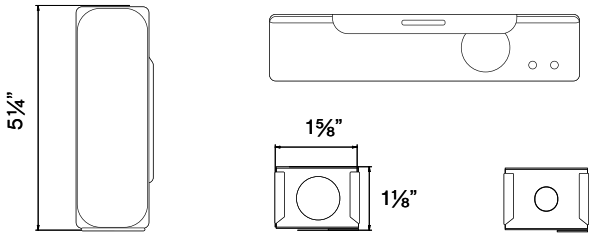

WIRING DIAGRAM

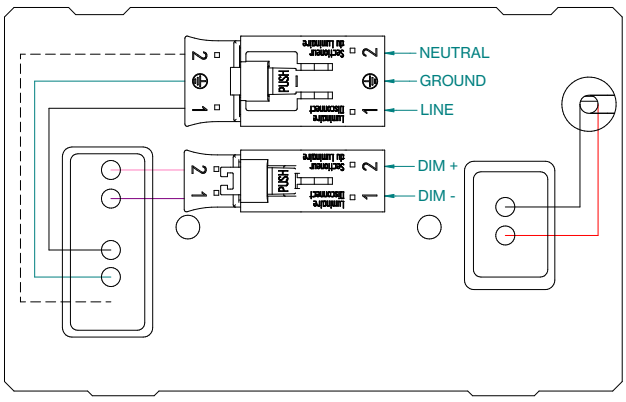

IC and non-IC rated Housing

TURN OFF POWER SOURCE BEFORE INSTALLATION

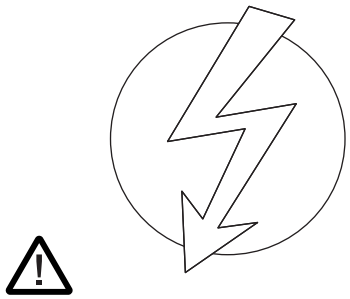

1. Center fixture between joist, extend

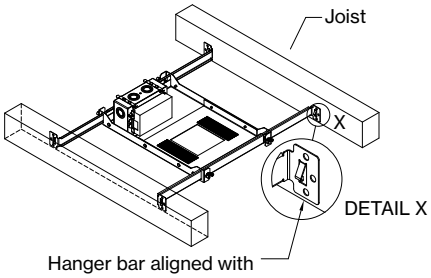

2. Secure hanger bars to joists with screws or nails (not provided by us)

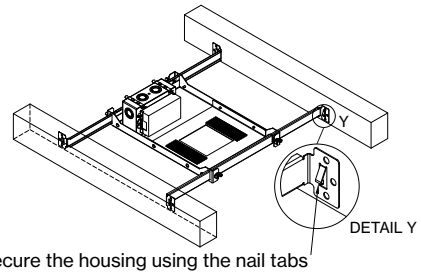

3. Position recessed box base to desired location and lock the housing to the bars.

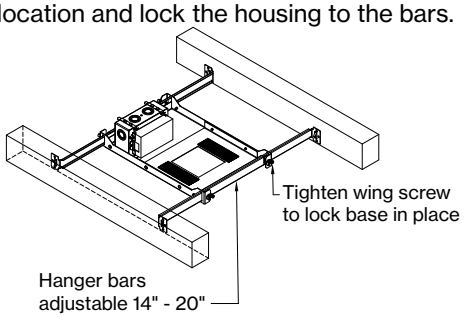

4. Remove knockout and install cable connector and feed electrical cable into box

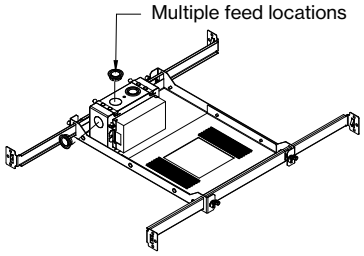

5. Make wire connections inside junction box by removing the access cover

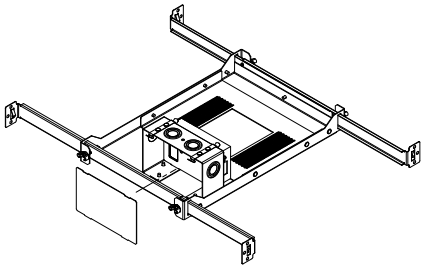

6. Wire driver to source and close access cover (refer to wiring diagram)

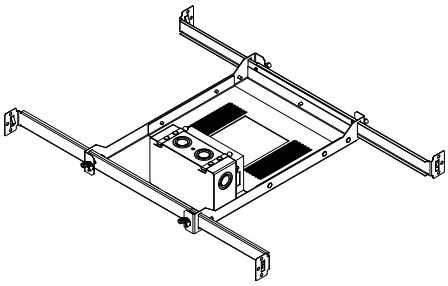

7. Install frame (trim option)
Cut out dimensions

TRIMLESS OPTION

Cut out hole according to the cutout dimensions for your lamp

Lamp cutout dimensions

Size Lamp	Cutout dimensions (TRIMLESS)
1⅞"	1⅞"
2½"	2½"
3½"	3½"

8. After drywall is installed, cut the opening using the lamp cutout as a guide

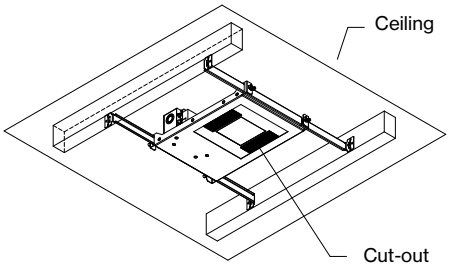

9. To install lamp use your hands to pull the cable from the driver through. Ensure orange female disconnect is on converter side.

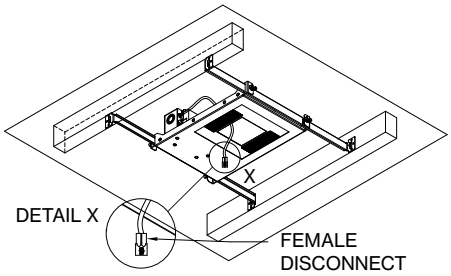

10. Connect low voltage side and fall protection

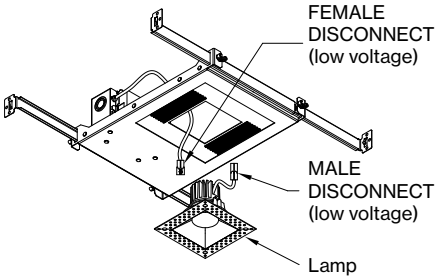

11. Insert lamp by driving drywall screws through mounting plate and into the ceiling material (drywall),

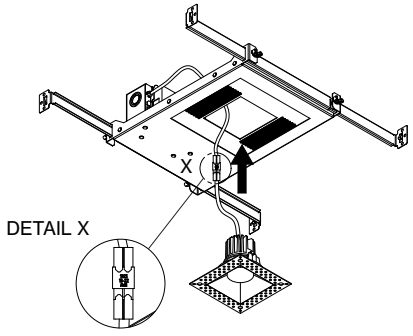

IC and non-IC rated Housing

12. Tightening until the fixture is snug and secure. Do not overtighten.

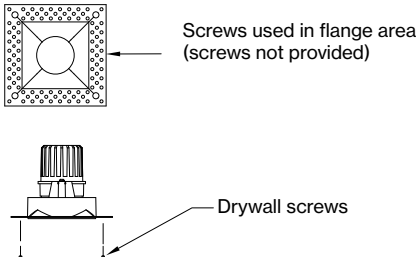

12. Turn and tilt range to desired location (lamp 360° rotatable and 35° tiltable) fixed options also available

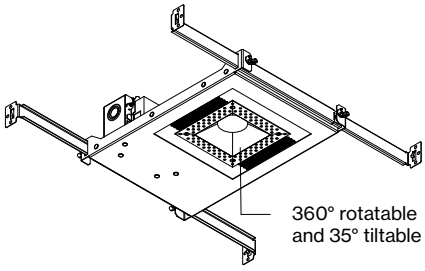

Lamp frame has four depth points to fit various ceiling thickness ¼", ⅜", ½" ⅝"

13. Spackle around the lamp

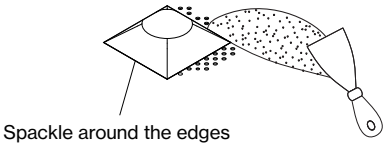

14. Paint over spackle

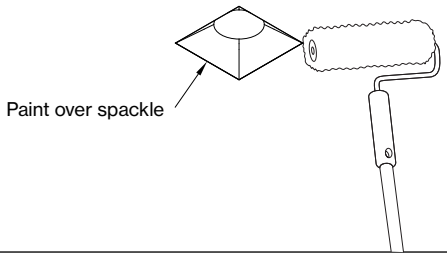

15. Installation complete



Remote Housing

1. Lamp cutout dimensions (trimless option)

TRIMLESS OPTION
Cut out hole according to the cutout dimensions for your lamp

Lamp cutout dimensions

Size Lamp	Cutout dimensions (TRIMLESS)
1⅞"	1⅞"
2½"	2½"
3½"	3½"

2. Option REM mounting: position mounting plate above cutout hole and secure plate with drywall screws (not provided)

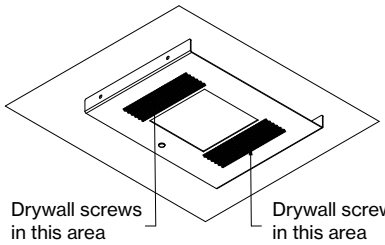

3. To install lamp use your hands to pull the cable from the driver through. Ensure orange female disconnect is on converter side.

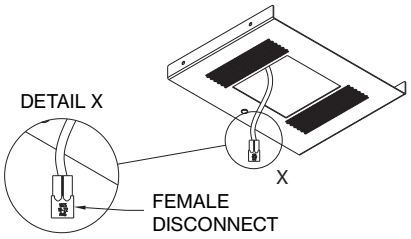

4. Connect low voltage side and fall protection

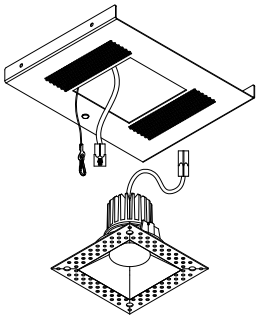

5. Insert lamp by driving drywall screws through mounting plate and into the ceiling material (drywall)

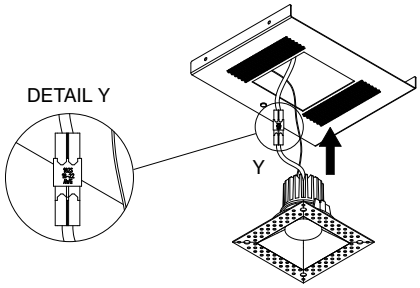

6. Tighten until the fixture is snug and secure. Do not overtighten.

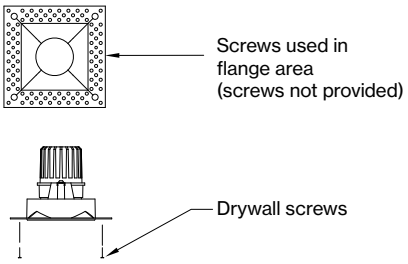

7. Turn and tilt range to desired location (lamp 360° rotatable and 35° tiltable) fixed options also available

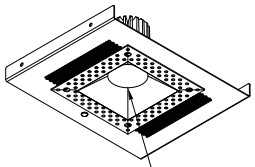

Lamp frame has four depth points to fit various ceiling thickness ¼", ⅜", ½", ⅝"

8. Spackle around the lamp

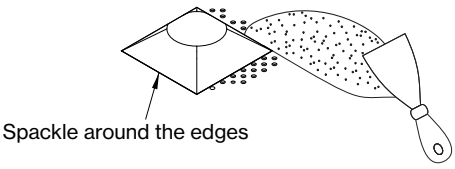

9. Paint over spackle

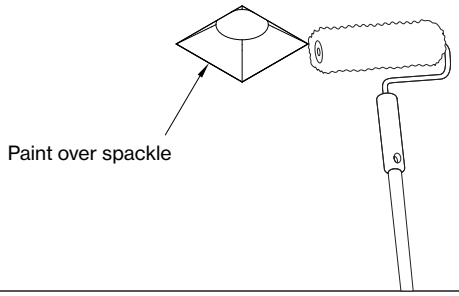

10. Installation complete



IC and non-IC rated Housing

TURN OFF POWER SOURCE BEFORE INSTALLATION

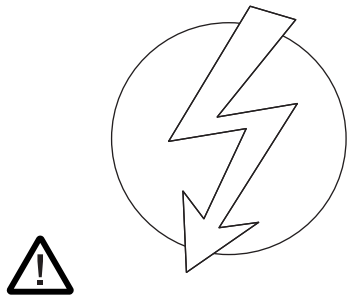

1. Center fixture between joist, extend hanger bars and mark mounting points

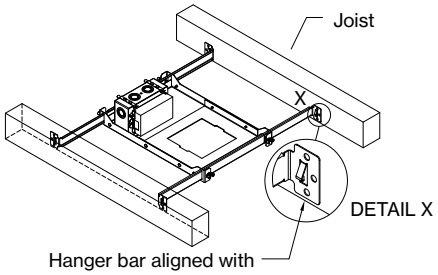

2. Secure hanger bars to joists with screws or nails (not provided by us)

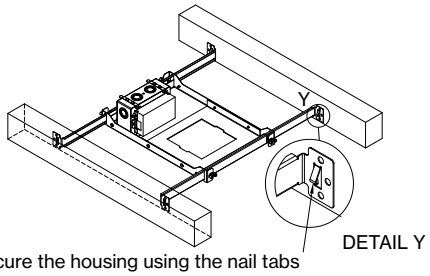

3. Position recessed box base to desired location and lock the housing to the bars.

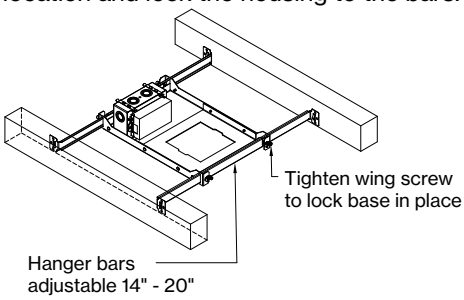

4. Remove knockout and install cable connector and feed electrical cable into box

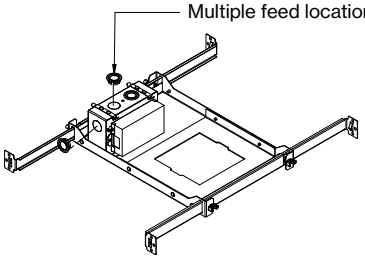

5. Make wire connections inside junction box by removing the access cover

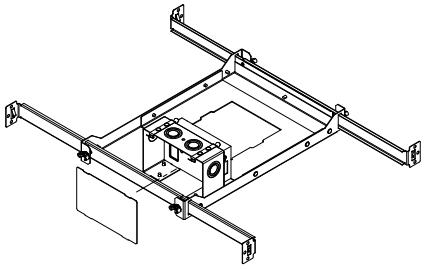

6. Wire driver to source and close access cover (refer to wiring diagram)

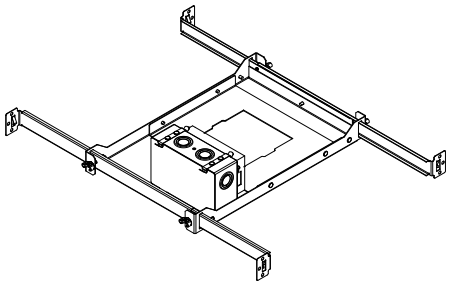

7. Install frame (trim option) Cut out dimensions

TRIM OPTION

Cut out hole according to the cutout dimensions for your lamp

Lamp cutout dimensions

Size Lamp	Cutout dimensions (TRIM)
1⅞"	1⅞"
2½"	2½"
3½"	3½"

8. After drywall is installed, cut the opening using the lamp cutout as a guide

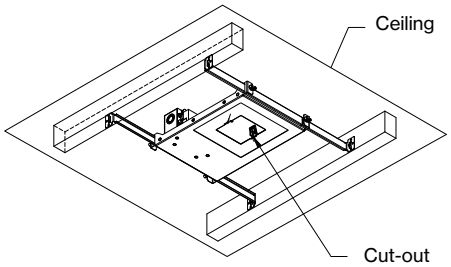

9. To install lamp use your hands to pull the cable from the driver through. Ensure orange female disconnect is on converter side.

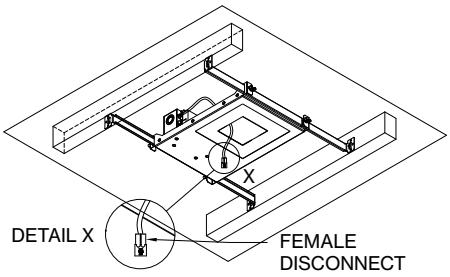

10. Connect low voltage side and fall protection

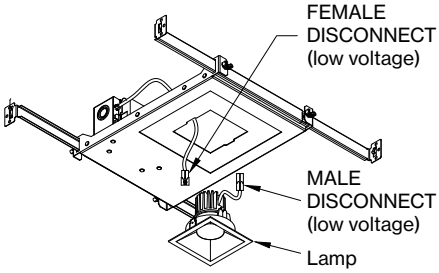

11. Insert lamp by lifting spring tabs in the vertical position and inserting into mounting plate and release, the lamp will snap in place

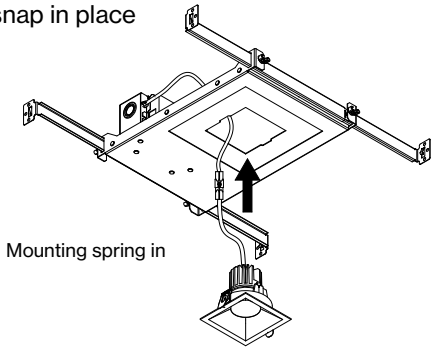

IC and non-IC rated Housing

12. Rotate the mounting spring.



Rotate the mounting spring so it is perpendicular to the ceiling surface (vertical orientation), then insert it through the mounting hole.



vertical position

13. Turn and tilt range to desired location (lamp 360° rotatable and 35° tiltable) fixed options also available

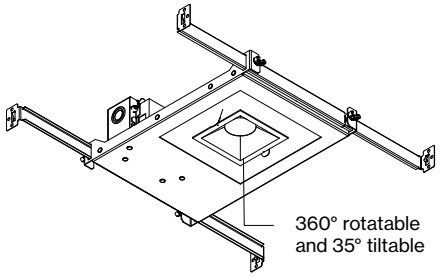

360° rotatable and 35° tiltable

Lamp frame has four depth points to fit various ceiling thickness ¼", ⅜", ½" ⅝"

14. Spackle around the lamp

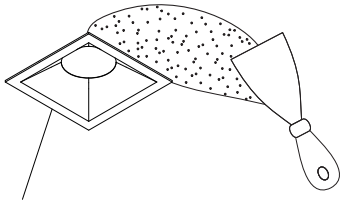

Spackle around the edges

15. Paint over spackle

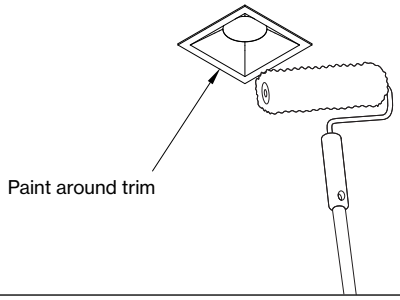

Paint around trim

16. Installation complete



Remote Housing

1. Lamp cutout dimensions (trimless option)

Cut out hole according to the cutout dimensions for your lamp dimensions

Size Lamp	Cutout dimensions
1⅞"	□ 48mm / 1⅞"
2½"	□ 64mm / 2½"
3½"	□ 89mm / 3½"

2. After drywall is installed, cut the opening using the lamp cutout as a guide

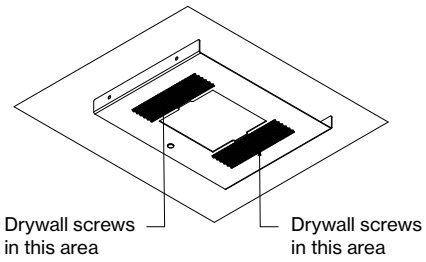

3. To install lamp use your hands to pull the cable from the driver through. Ensure orange female disconnect is on converter side.

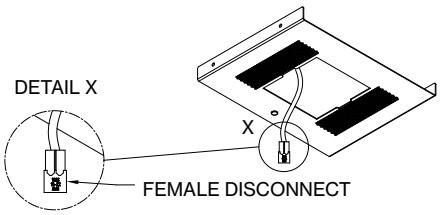

4. Connect low voltage side and fall protection

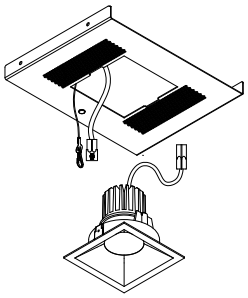

5. Insert lamp by lifting spring tabs in the vertical position and inserting into mounting plate and release, the lamp will snap in place

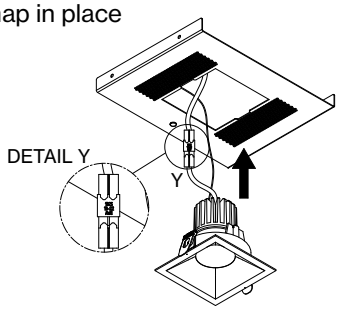

6. Rotate the mounting spring.

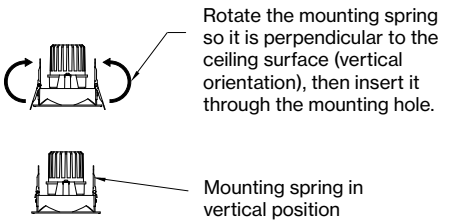

7. Turn and tilt range to desired location (lamp 360° rotatable and 35° tiltable) fixed options also available

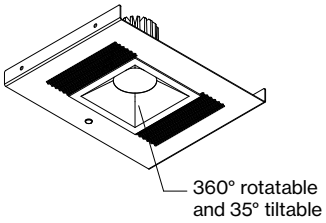

Lamp frame has four depth points to fit various ceiling thickness 1/4", 3/8", 1/2" 5/8"

8. Spackle around the lamp (Optional)

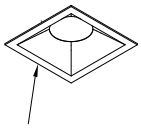

9. Paint over ceiling

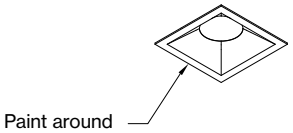

10. Installation complete



Technical Support Hotline

Call the Technical Support Hotline from
Monday to Friday, 8 AM - 6 PM (EST)

Hotline:

+1 203 262 9990

Or 24/7 via email:

support@basolighting.com

EN **Installation, commissioning and maintenance may only be performed by authorized and qualified personnel, taking into consideration these installation instructions and any standards and regulations applicable to the respective area of application.The electrical, mechanical and thermal suitability of the luminaire for the intended area of application must be ensured and the secure fastening of the luminaire after its installation must be controlled. Turn off supply voltage before replacing any lamps (if applicable) as well as before performing any other works on the luminaire (e.g. cleaning) and wait until luminaire and lamp have completely cooled off. Please refer to the installation notes of the lamp manufacturer when inserting, replacing and operating conventional lamps. Use a soft, damp cloth to clean the luminaire. To clean plastic components and reflectors, a standard pH neutral, alcohol-free, non-abrasive cleaning agent may also be used.**

Keep these installation instructions in a safe place as reference for any future maintenance works.

1. The lamp is not suitable for outdoor use.
2. The lamp may only be used with a safety guard.
3. Damaged protection glasses and covers have to be replaced immediately.
4. Corrosive chemical products must not be used as this may have a detrimental effect on the luminaire.
5. No liability is accepted for any subsequent change of the luminaire.
6. LEDs are high-quality electronic components! Please avoid touching by hand the LED light emitting surface while assembling or replacing parts and during maintenance work.
7. To avoid damage of the profile, unevenness on the wall or ceiling must be leveled out before assembling the profiles. While assembling the profiles, make sure they do not deform in order to guarantee their proper function.
8. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
9. The LED circuit must always be closed, before the converter is connected to the main power. BASO does not assume any liability for damages resulting from nonobservance of this rule.
10. Luminous flux and connected electrical load are subject to an initial tolerance of up to +/-10%. Color temperature is subject to a tolerance of up to+/- 150 Kelvin from the nominal value.

FR **Le montage et la maintenance peut être effectuer par specialistes respectant les norms y régles valides. Assurer l'aptitude térmique, mecanique et éléctrique pour l'emploi prevue et assurer la fixage de la luminaire. Éteindre la tension avant de changer les lampes (si applicable) ou avant de realiser travaux (p.ex nettoyage) a la luminaire. Attendre jusqu'à ce que la luminaire et les lampes ont fraichit completement. Merci de bien vouloir vous référer aux notes d'installation du fabricant de la lampe lors de l'insertion, le remplacement et la mise en route, avec des lampes conventionnelles. Pour nettoyer la luminaire utiliser un drap humide et doux. Pour nettoyer les partes du plastique ou les reflecteures on peut utiliser encore un produit de nettoyage sans alcol qui ne fraye pas le material. Garder cette notice de montage pour possibles travaux de maintenance.**

1. La luminaire n' est pas apte pour l'utilizage extrerieur.
2. Utilizer la luminaire seulement avec un dispositif de sécurité
3. Changer immédiatement des verres de sécurité defectes ou bien des écrans de protection.
4. Evitez tout contact de la lampe avec de produits chimiques corrosifs.
5. Nous déclinons toute responsabilité en cas de modifications ultérieures.
6. Des LEDs sont des composants électroniques de haute qualité! Eviter tout contact direct de la surface de sorti de lumiére de la LED avec les mains lors du montage ou des les travaux de maintenance de la lampe.
7. Pour éviter 'endommagement du profil, il est nécessaire de compenser les irrégularités du mur ou du plafond avant le montage des profils. Pour garantir un fonctionnement irréprochable des profils, il ne faut pas déformer les profils lors du montage.
8. La source du luminaire peut être remplace uniquement par le fabricant ou un tiers habilité.
9. Il faut que le circuit de LED soit fermé avant de connecter le convertisseur. BASO ne assume pas la garantie si cette norme ne se respecte pas.
10. La puissance et le flux lumineux affichent d'origine une tolérance de +/-10 %. Tolérance de la couleur de température : +/- 150 Kelvin.

ES **La instalación, la puesta en marcha y el mantenimiento sólo deben realizarse por personal especializado considerando esta guía de instalación y todas las normas y reglamentaciones vigentes. Asegurarse de la aptitud eléctrica, mecánica y térmica de la luminaria para la aplicación prevista y comprobar la fijación segura de la luminaria después desu instalación. Apagar siempre la corriente antes de cambiar la lampara (en caso justificado) o de realizar algún otro trabajo en esta (p.ej. Limpieza). Esperar hasta que se enfrien la luminaria y la lampara completamente. Tener en cuenta las instrucciones de montaje del fabricante al colocar, cambiar y utilizar lamparas convencionales. Para la limpieza dela luminaria utilizar un paño suave y húmedo. Para limpiar componentes de plástico y reflectores puede usar también un limpiador pH neutral y sin alcohol que no roce el material. Guardar esta guía de instalación para trabajos de mantenimiento.**

1. La luminaria noes apta para utilizarla en el exterior.
2. La luminaria solo debe accionar con un dispositivo de seguridad.
3. Cambie de inmediato los vidrios y las tapas de protección dañados.
4. Químicos que tienen efectos corrosivos no deben influir en la luminaria.
5. Para modificaciones futuras en la luminaria no se asume ninguna responsabilidad.
6. Los LED son componentes electrónicos de alta calidad! Por favor durante el montaje o el mantenimiento evite el contacto directo con la superficie de emisión.
7. Para evitar danos en el perfil, los desniveles de las paredes y techos deben ser enrasados antes del montaje de los perfiles. Para garantizar su buen funcionamiento, los perfiles no deben sufrir deformaciones durante el montaje.
8. La fuente luminosa contenida en esta luminaria debe ser reemplazada únicamente por el fabricante o su agente de servicio o similar persona cualificada.
9. El circuito LED debe ser cerrado antes de conectar el convertidor. BASO no asume garantía si esta norma nose respete.
10. La potencia original y el flujo luminoso presentan una tolerancia de +/-10%. Tolerancia de temperatura de color: +/- 150 Kelvin.



The lamp may only be operated with its full protective cover!

L'apparecchio necessita del relativo vetro di protezione!

Sólo usar la luminaria con su cobertura de seguridad completa!



Recommended room temperature: 77 °F.

Temperatura ambiente recomendada: 77 °F.

Température ambiante recommandée: 77 °F.

Don't touch the LED

Use gloves.

Use guantes.

Utiliser des gants.